





WOOD & MDF CABINETRY

Wood & MDF doors are designed for interior residential use in a climate-controlled environment. Colour, grain characteristics, density and porosity variations occur in all genuine hardwood products.

CABINET EXTERIORS

Regular cleaning of wood doors should be done with a clean, damp cloth and dried immediately with a soft cloth. A mildly damp microfiber cloth works best for cleaning your cabinetry.

Soaps & Detergents: Do not use detergents, strong soaps, abrasives, or self-polishing waxes on your cabinets. Avoid using cloths, which may contain remnants of these cleaners as they may leave streaks and shiny spots in the finish.

Moisture: Excess moisture is the worst enemy of any finish. Dry off any water immediately with a dry, soft, cloth. Avoid exposure of doors and drawers to high heat. Avoid water splashing against and settling against the bottom of toe kicks, panels and gables as it will cause the particle core material to swell. This is not covered by warranty.

Humidity: Indoor relative humidity should be between 30% and 50%. As with any wood product, when humidity is too low or fluctuates, cracking and splitting may occur.

CABINET INTERIORS

Regular cleaning of cabinet interiors should be done with a clean, damp cloth and dried immediately with a dry, soft cloth.



Ottawa, ON K2C 3P1 Phone: 613.596.5155

550 Hall Avenue East Renfrew, ON K7V 2S9 **Phone:** 613.432.6693

Toll-free: 1.800.267.8815

Email: info@deslaurier.ca www.deslaurier.ca







THERMOFOIL CABINETS

Regular cleaning of thermofoil doors should be done with a mild soap and water solution and dried immediately with a dry, soft cloth.

Heat: Exposure of thermofoil doors to heat will result in de-lamination of peeling of the foil. Damage caused by exposure to heat in excess of 80 C (185 F) is not covered under warranty and replacement of the doors or drawer fronts will be at the expense of the customer.

Small Appliances: Kettles, toasters and toaster ovens cannot be placed under cabinetry. Prolonged exposure will cause de-lamination of the thermofoil doors.

Dishwashers: Allow dishwasher to dry the dishes using the dry cycle. The common practice of opening the dishwasher to allow steam to escape forces the steam onto neighboring doors and drawer fronts. Damage caused in this fashion is not covered under warranty and replacement of the doors and drawer fronts will be at the expense of the customer.



Phone: 613.432.6693 **Toll-free:** 1.800.267.8815

Email: info@deslaurier.ca www.deslaurier.ca